



12 - Tributary widths (One-way)

One-way tributary width method tends to be exact in the following cases:


#1 Single span beam with uniform loading.

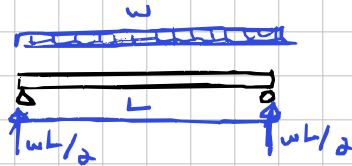

#2 Continuous Beam on flexible supports.

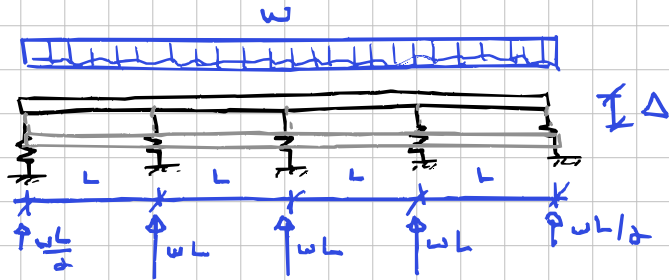

#3 Central spans of continuous beams with many supports.

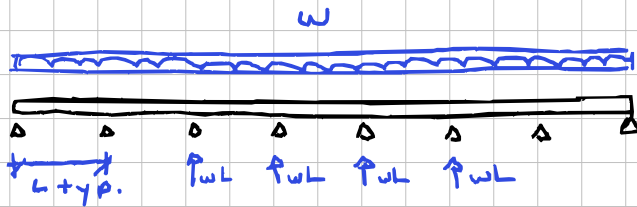

#4 Stiff deflection controlled beam (flexible diaphragms)

